



Hardware

A M6 x 40mm Long Bolt (4)



B #4mm Allen Wrench (1)

Use **B** 4mm
Allen Wrench

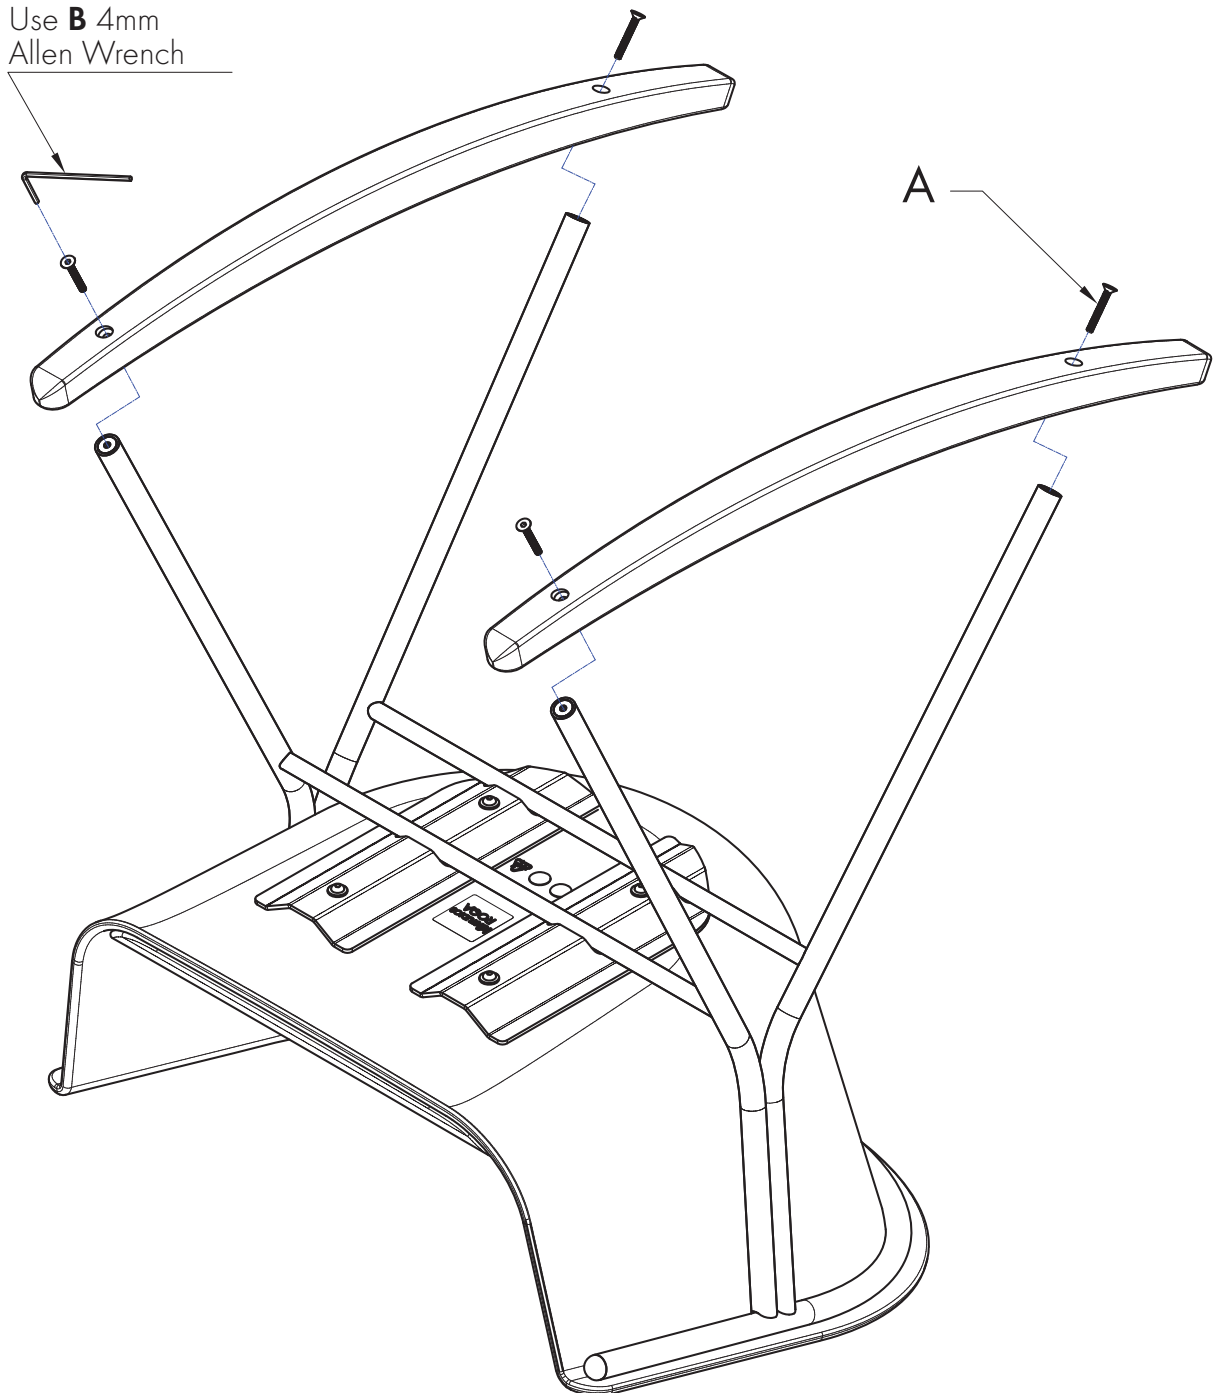

Putting together your new chair is easy!
Please remove all items from box and ensure all components are present.

1-800-457-5073