





# KFi STUDIOs | Jade Work Chair Arm Cap Assembly

## Hardware

A M6 x 12mm (4) 

B M6 x Ø11mm (4) 

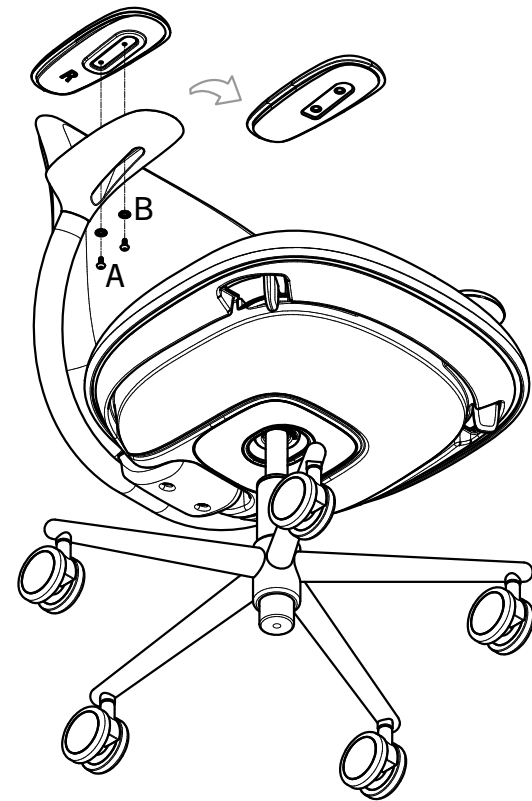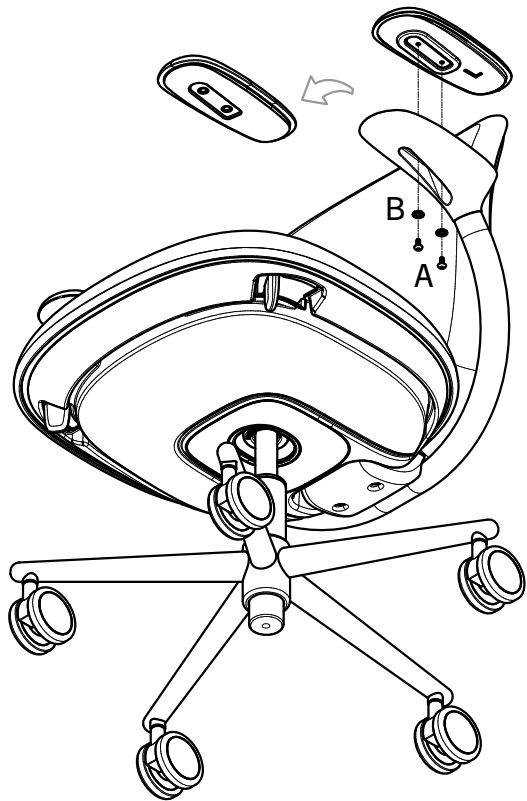

Putting together your new chair is easy! Please remove all items from box and ensure all components are present.

1-800-457-5073 | [kfistudios.com](http://kfistudios.com)